


ENGINE COOLANT TEMPERATURE SENSOR

ENGINE COOLANT TEMPERATURE (ECT) SENSOR REMOVAL/INSTALLATION

1. Remove the following part for easier access.
 - Generator (See GENERATOR REMOVAL/INSTALLATION .)
2. Drain the engine coolant. (See ENGINE COOLANT REPLACEMENT .)
3. Disconnect the ECT sensor connector.
4. Remove the ECT sensor.

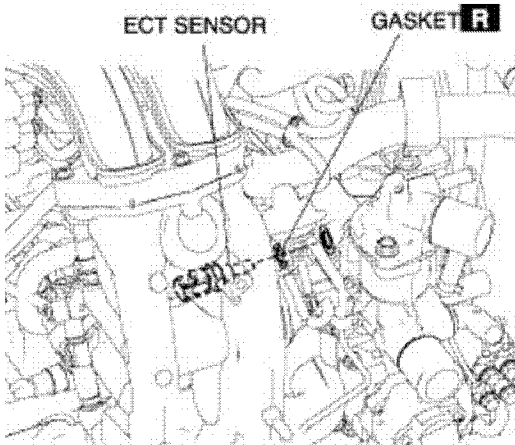

5. Replace the gasket.
6. Install in the reverse order of removal.

ECT sensor tightening torque

- 15.7—23.5 N·m {1.61—2.39 kgf·m, 11.6—17.3 ft·lbf}